

 
Electric Scooter

A Guide For Your Ride



Whats in the Box

1. Handlebar
2. Headlight
3. Release Lever
4. Front Tire
5. Kickstand
6. Deck
7. Rear Foot Brake
8. Rear Tire
9. Small Screw (x4)
10. Charger
11. Charging Cable

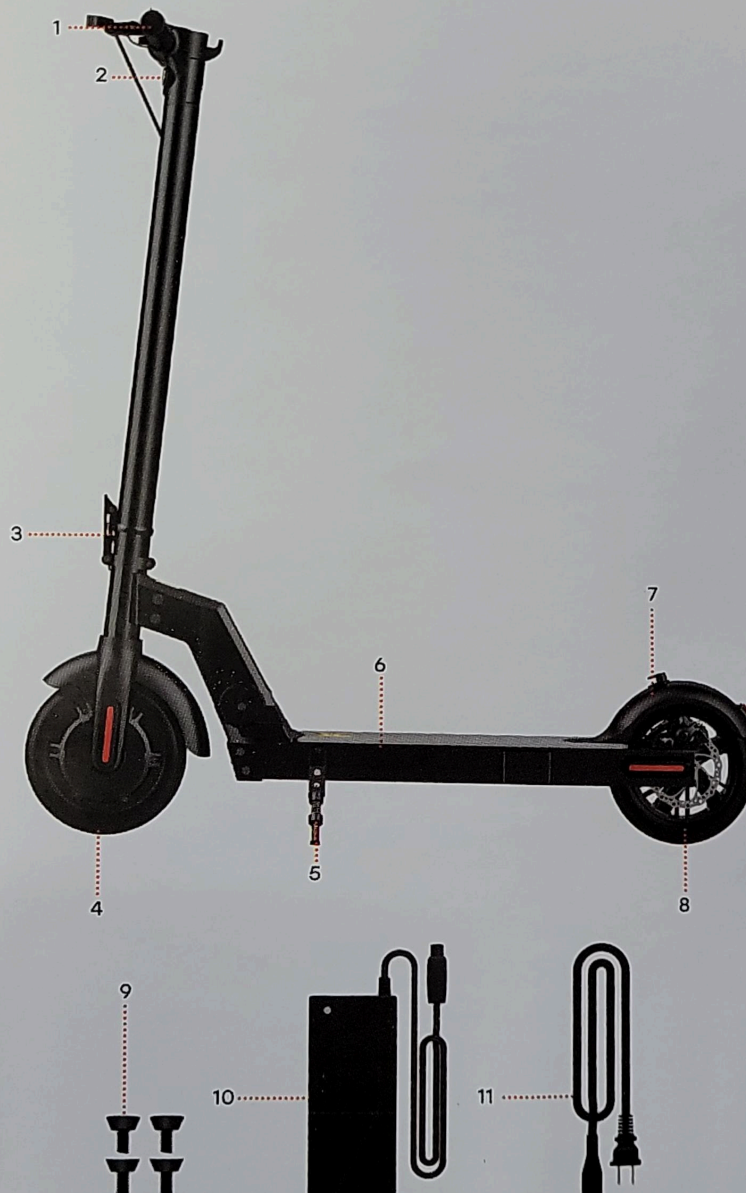

Specs & Features

- Unfolded Dimensions:43"x16.5"x43"
- Folded Dimensions:43"x16.5"x18"
- Deck Size:26.5"x5.5"
- Handlebar Height:43"
- Weight Limit:up to 235lb
- Product Weight:30lb
- Recommended:Age 15+
- Tire Size:8.5"
- Max Speed:up to 16mph
- Max Range:up to 16miles
- Battery:36V10Ah Lithium
- Motor:350W Hub motor
- Charger:100-240V
- Charging time:3-4hours
- Climbing Angle:Up to 15°
- Frame Material:Al alloy

 
Please Note: Images may not reflect exact appearance of actual product.

1. Get Started

1.1 Assembly


Connecting the Handlebar:

- Connect the two plugs from the Handlebar and Stem Tube. Tuck any excess wire into the Stem Tube.
- Slide the Handlebar into the Stem Tube.
- Tighten using the four screws. Make sure the screws are tight and the Handlebar is secure.

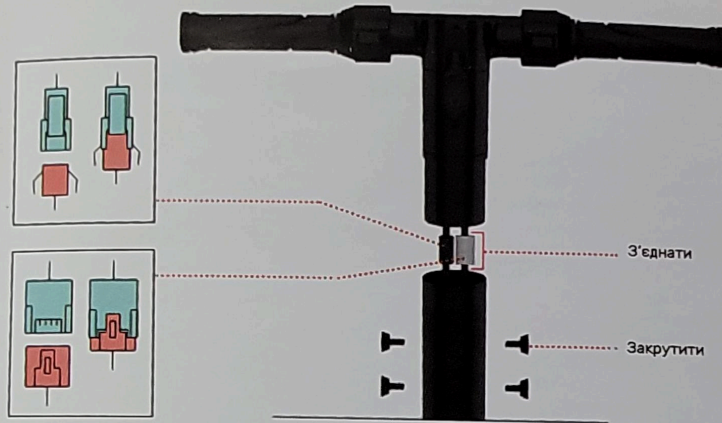

1.2 Battery Care Tips

 - Only use the included charger.
- Plug the charger into the wall before the Charging Port.
- Don't turn on the Element while it's charging.
- Charge the battery until it is fully charged - up to 4 hours.
- Replace the cover over the Charging Port when done.

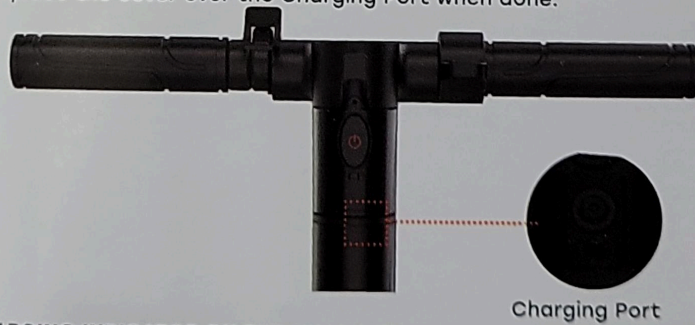


CHARGING INDICATOR ON THE CHARGER:

- - Charging
- | ● - Charge Complete


1.3 Unfolding the SCOOTER



 
Unclip the hook from the Rear Foot Brake.

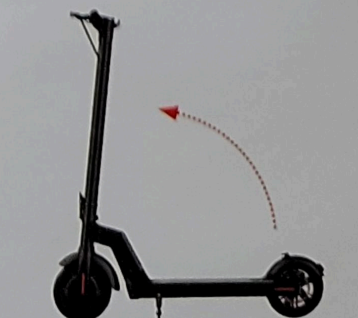

Lift Handlebars away from Deck.

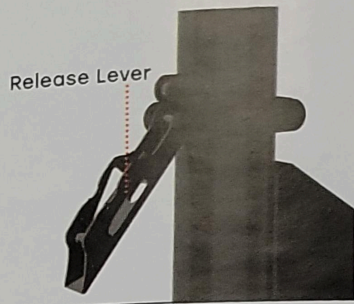 


 Lock the Release Lever by lifting it up until it clicks.

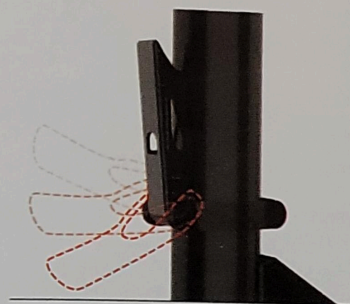

Make sure the Release Lever and Handlebars are secure. Unlock the Release Lever to fold.

 1.4 Operating the SCOOTER

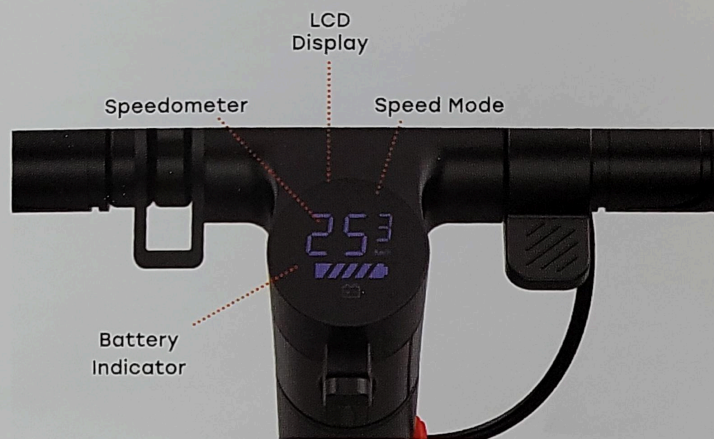

- **Powering On** - Press the Power Button to turn on.
- **Powering Off** - Hold the Power Button for 2 seconds to turn off.
- **Speedometer** - Hold the Power Button for 6 seconds to wrable to suitoh.
- **Speed Modes** - Press the Power Button once to switch the speed modes.
- **Light Function** - Press the Power Button twice to turn on the headlight. The light symbol will show on the LCD Display.

SPEED SETTINGS:



1 - Max speed up to 10 mph



2 - Max speed up to 13 mph



3 - Max speed up to 16 mph

BATTERY LEVELS


Lights	1 (Flashing Light)	1 (Solid Light)	2	3	4	5
Percentage	0-20%	20-35%	35-50%	50-65%	65-80%	80-100%

2. Make Moves

2.1 Riding the SCOOTER

- Place one foot in front.
- Place the other foot in back, at a 70-90° angle.
- Turn the handlebar to the left or right to make turns.

 2.2 Using the Thumb Throttle

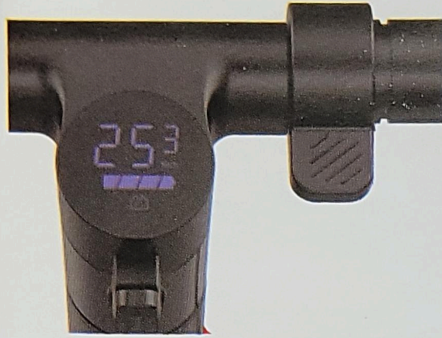

Note: Use the throttle gently until you get used to it.

2.3 Using the No-Ebvoke

Note: Press down on the E-Brake slowly to avoid stopping abrupt or losing control.



Care & Maintenance

RIDING RANGE

The maximum range is 16 miles. However, many factors will affect how far you can go per charge:

- Driving Surface: A smooth, flat surface will increase driving distance.
- Weight: More weight means less distance.
- Temperature: Ride, charge, and store the Element above 50°F.
- Maintenance: Timely battery charging will increase driving distance.
- Speed and Driving Style: Frequent starting and stopping will reduce driving distance.

CLEANING THE SCOOTER

To clean the scooter, carefully wipe with a damp cloth, then dry with a dry cloth. Do not use water to clean the scooter, as the electrical and electronic systems may get wet, resulting in personal injury or malfunction of the scooter.

BATTERY

- Keep away from fire and excessive heat.
- Avoid intense physical shock, severe vibration, or impact.
- Protect from water or moisture.
- Do not disassemble the Element or its battery.
- If there are any issues with the battery, please contact Jetson Customer Support.


STORAGE

- Fully charge the battery before storing. The battery should be fully charged once a month after this.
- Cover the Element to protect against dust.
- Store the Element indoors, in a dry place.

Safety Warnings

- For your safety, please read the user manual and safety warnings carefully, and make sure you understand and accept all the safety instructions. The user will be responsible for any loss or damage caused by improper use.
- Children, the elderly, pregnant women, and those with heart conditions should not use the product.
- The rider should not exceed 235 lb
- Do not ride at night.
- Do not use near motor vehicles.
- Do not ride after consuming alcohol, drugs, or while intoxicated.
- Do not ride the product if you have had any head, back, or neck ailments, or prior surgeries to those areas.
- Persons with any mental or physical conditions that may make them susceptible to injury or impair their dexterity or mental capabilities should recognize, understand, and perform all of the safety instructions and be able to assume the hazards inherent in using the product.
- Do not carry items when riding.
- Always wear shoes, a helmet, and appropriate safety gear.
- Prior to each ride, inspect each part of the product to ensure it has been maintained correctly and is functioning properly.
- Tighten all screws and locking nuts before each ride to ensure they are tight.
- Always give way to pedestrians.
- Always comply with local traffic laws and regulations.
- Be alert to things in front and far away from you.
- Make sure your feet are always placed securely on the deck.
- The product cannot be ridden by more than one person.
- When you ride the product along with other riders, always keep a safe distance to avoid a collision.
- When turning, be sure to maintain your balance.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- Avoid riding in the rain or on smooth surfaces such as snow or ice.
- Do not ride on roads with obstacles (such as litter, small stones, etc.).
- Avoid riding in narrow spaces or on steep slopes.
- Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.
- Never operate the products barefooted and keep shoelaces tied.
- Riding with improperly adjusted brakes is dangerous and can result in serious injury or death.
- Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall. Sudden or excessive application of the brake may result in injury or death.
- Do not ride without proper training. Do not ride at high speeds, on uneven terrain, or on slopes. Do not perform stunts or turn abruptly.
- The area that the product is to be operated should be safe and suitable for safe operation.
- Check whether all safety labels are in place and understood before riding.
- The owner shall allow the use and operation of the unit after a demonstration that such operators can understand and operate all components of the unit before use.
- Operators shall adhere to all of the manufacturer's recommendations and instructions, as well as comply with all laws and ordinances.
- Only ride the product with adequate daylight conditions for visibility.
- We encourage you to highlight the product, for visibility, by using lighting, reflectors, and signal flags on flexible poles.
- If device or internal components come in contact with water or moisture, do not use.
- Keep your fingers and other body parts away from all other moving components when operating the product. Always keep your hands on the handlebar.

CALIFORNIA PROPOSITION 65

 **WARNING:** This product can expose you to a chemical such as Cadmium that is known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to www.p65warnings.ca.gov/product

MODIFICATIONS

Do not attempt to disassemble, modify, repair, or replace the product or any components of the unit without instruction from Jetson Customer Support. This will void any warranty, and can lead to malfunctions which may cause injury.

ADDITIONAL OPERATION CAUTIONS

Do not lift the product off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the product, and do not jump while using it. Always keep your feet firmly planted on the deck while in operation. Always check the battery charge before using.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Remember to be safe and most importantly, have fun!