

E-BIKE OWNERS MANUAL



ELECTRIC BIKE /COLOR: Armada Phantom/

SERIAL NUMBER:

PURCHASE DATE:

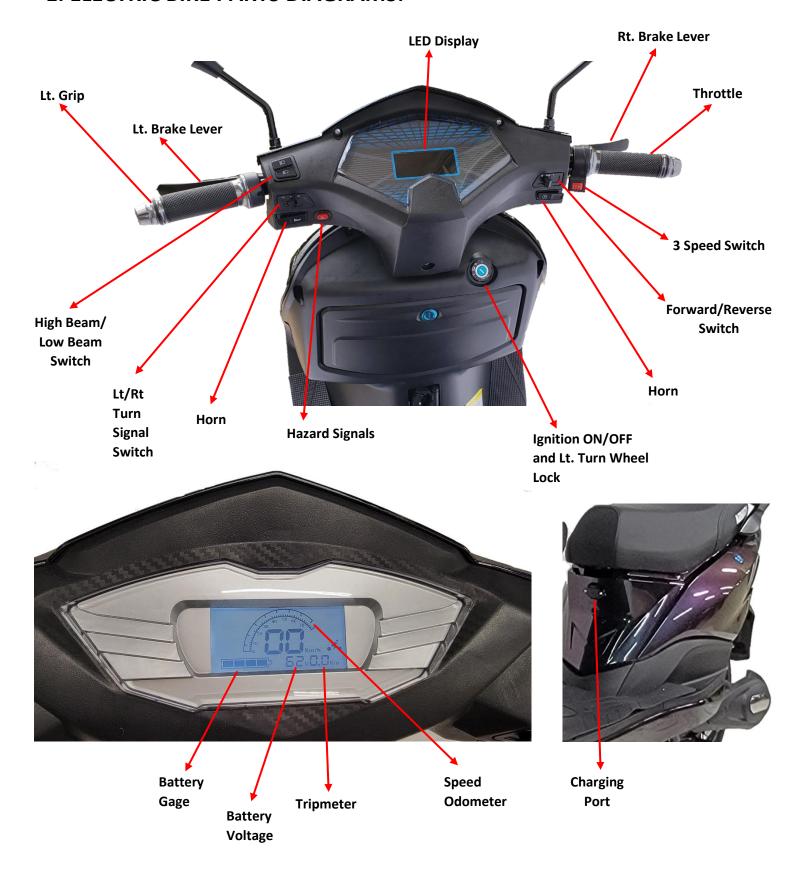


TABLE OF CONTENTS

- 1. Electric Bike Parts Diagram
- 2. Essentials of Safely Driving an E-Bike
 - 2.1 Battery
 - 2.2 Helmet
 - 2.3 Lights
 - 2.4 Brakes
 - 2.5 Tires
 - 2.6 Carrying Capacity
 - 2.7 Appropriate Riding Gear
 - 2.8 Electrical Care
 - 2.9 Security
- 3. Operational Instruction
 - 3.1 Start Up
 - 3.3 Parking
 - 3.4 Charging
- 4. Maintenance and Care
 - 4.1 Battery type and care
 - 4.2 Handling the battery
 - 4.3 Distance and power
 - 4.4 Effects of temperature
 - 4.5 Breaker Switch
 - 4.6 Battery Storage
 - 4.7 Cleaning Care
 - 4.6 Regular Maintenance Time Table
- 5. General Technical Info Tips & Trouble shooting



1. ELECTRIC BIKE PARTS DIAGRAMS:





2. ESSENTIALS OF SAFELY DRIVING AN E-BIKE:

Before embarking on your E-bike, it's important to check the following for safety:

- **2.1 BATTERY:** Check the battery level on the LCD digital display monitor before going on a long ride (30-50km). The battery level is indicated by the filled in bar levels. Consider taking the charger with you.
- **2.2 HELMET:** Always wear a helmet to prevent head injuries. It's the law in most provinces to wear a helmet while riding on a E-Bike.
- **2.3 LIGHTS:** Check headlight, brake lights and both right and left turn signals are working properly before riding. Use hand signals if your signaling lights stop working. Always use your headlight so cars and pedestrians can see you.
- **2.4 BRAKES:** Squeeze the right and left brake levers on the E-Bike to ensure they engage. Visually inspect the brake pads for wear.
- **2.5 TIRES:** Typically, rear tires should be kept closer to 35-40psi for less rolling resistance although the front tire bears less weight, it can be set a bit lower, closer to 30-35psi. Inflate your tires on a regular basis to the recommended pressure as shown on the tires. keep a tire plug kit handy to plug a hole once you find it. Inner tire coating also known as "slime" also works. If you have a tire with an inner tube in it, either repair the tube with a patch kit or better yet, replace it. Most ARMADA ELECTRONIC VEHICLES have tubeless tires.
- **2.6 CARRYING CAPACITY:** Typical carrying capacity for most E-Bike is 300lbs. Do not over-load max carrying weight of the E-Bike. Doing so will affect performance and may cause damage to components on the E-Bike. Securely fix cargo on the vehicle to ensure safe drive and do not hang anything on handlebars, so as not to affect normal driving.
- **2.7 APPROPRIATE RIDING GEAR:** Wear appropriate clothing for all riding conditions such as; a long sleeve shirt, long pants, boots/shoes, reflective gear or bright clothing, gloves, waterproof outerwear/poncho. Avoid wearing loose clothing that might get caught while riding.
- **2.8 ELECTRICAL CARE:** To prevent water from getting on electrical components keep the E-Bike covered when not in use. Avoid riding in deep water that could submerge your wheels above the axle. The rear axle is where the wiring goes into your motor so you should not get water inside. Electric components can get over heated if the E-Bike is driven for long periods of time in hot weather or driving it up steep hills (more then a 20-degree incline).
- **2.9 SECURITY:** Set your alarm when parked for a period of time. Consider using the left wheel lock position to make it more difficult for thieves to roll it away. Use an additional lock for extra security to secure your E-Bike or use a wheel lock to make it immobile.



3. OPERATION INSTRUCTION:

3.1 STARTING UP: Drive in ideal conditions for optimal E-Bike performance.

- **a.** Make all safety checks on battery level, both break levers, both right and left turn signals, horn, and headlight. Check and tighten any bolts and nuts. Adjust mirrors for proper visibility.
- **b.** Check air pressure in tires. Make sure air in tires are holding and there are no leaks.
- a. <u>Turn alarm off.</u> If alarm is on when the ignition is turned on the E-Bike will turn on and then turn off. The bike will not move at this point when the key is in the ignition. Take the key out of the ignition and turn the alarm off. If the alarm does not turn off, open the seat and switch the breaker off to reset then turn it on. Then press the alarm off on the key fob.
- **b.** Ensure pedals are attached tightly and safely.
- c. Retract main kickstand or side kickstand.
- d. Ensure forward drive is switched on and not reverse drive.
- **e.** Driver sits on seat, insert the key in ignition, turn key clockwise to ON position. The dash display will be visible but there will be no engine sound.
- **f.** Place hands on both Rt and Lt brake leaver for safety when you are ready to drive. Turn the throttle towards you slowly to start accelerating.

3.2 PARKING: Park in designated public areas using the alarm.

- Turn off ignition by turning the key left counter clockwise before parking.
- Use the front wheel lock by turning the handlebars fully to the left; push key down in the ignition and turn to the left (counter clockwise).
- It is recommended to use a heavy-duty bike lock or chain looped through the wheel or front suspension to secure the E-bike when parked. Consider using a disc lock brake for the wheels.

3.3 CHARGING: Let your batteries cool before charging. Charge frequently for best performance.

- Turn off ignition before using the charger.
- On the E-Bike, plug the charger to the output socket then to a standard 110V wall power outlet.
- Completely empty batteries will take 6-8 hours to charge with a standard charger. Disconnect the battery charger and unplug from E-Bike when not in use.
- The red light on the charger indicates that the E-Bike is being charged and the fan inside the charger will be on. Once it's fully charged the green light will turn on. Place the charger back inside the seat storage.
- Charging should proceed in condition of good ventilation not in an environment with corrosive gas or flammable condition.
- Avoid dropping the charger. The battery charger should be regularly examined for damage to the cord, plug, enclosure and other parts. In the event of such damage, if any is found, the E-Bike should not be charged until the battery charger has been repaired or replaced.



- During winter or any long-time storage of the electric vehicle, the battery should be recharged every month to maintain functionality.
- If the charger becomes too hot, the charger lights will flash indicating a malfunction of the charger or charging circuit. Disconnect charger immediately to prevent any damage. If the lights continue to blink and there is no more fan noise, the charger will not charge the E-Bike.
- Charge the E-Bike after each use if possible, to condition the battery cycle.

4. MAINTENANCE AND CARE:

4.1 BATTERY TYPE AND CARE: 12V 20AH Lead Acid Non Spill-Able Batteries; Weight 15lbs.

The typical life cycle of these batteries are 1 ½ to 2 years. After approximately 300 charges, a lead-acid battery will need to be replaced, you will notice that your battery cannot carry as much of a charge as it could initially. Contact your local ARMADA Scooter shop to purchase a new battery. Replace battery with an identical or similar battery. When replacing your battery, dispose of it at a proper battery recycling facility or return to an ARMADA Scooter Shop.

- **4.2 HANDLING THE BATTERY:** The battery contains large amounts of electrical power. You must use caution and respect when handling it. Not following these instructions can result in serious injury.
- DO NOT place your lead acid battery on concrete. Concrete drains the batter's power and will neutralize the lead-acid. Placing the battery on concrete for any length of time will likely result in the battery being drained of power and possibly losing its ability to store electricity.
- Always lift the battery with both hands and carry it with care. Never drop the battery. If the case is damaged, the contents may leak out. Do Not use the battery if damaged.
- Never puncture or open the battery case. The contents are dangerous and may cause injury. Do not touch the contents of a leaking battery.
- Do not touch the two metal poles on the battery box at the same time. This can cause a short-circuit. It could cause injury to you or others and can cause serious damage to the electrical system of the E-bike.
- Do not handle your battery if either you or the battery are wet. Water is an excellent conductor of electricity. You may experience an electrical shock and serious injury.
- **4.3 DISTANCE AND POWER:** The E-bike can go up to a distance of 35 to 50km before it must be recharged. The ability of your battery to power your E-bike depends on many variables. These variables include the weight of the rider and cargo, the prevailing wind resistance, steep hills and inclines, and tire pressure.



4.4 EFFECTS OF TEMPURATURE:

Temperature plays a critical role in the battery performance and life cycle. At higher temperatures, battery capacity generally increases; as the temperature drops, so does the capacity. This is why riding your E-Bike at 20 degrees Celsius will give you better performance and range than riding at 5 degrees Celsius. While keeping the batteries cold may seem like a great idea in theory, you need to make sure that they do not get too cold. In our climate here in Canada, storing E-bike batteries in an unheated garage, garden shed or outdoors will most likely cause them to freeze. This results in permanent damage to the internal lead plates or plastic casings. Make sure you store your batteries where it won't freeze.

4.5 BREAKER SWITCH: The Breaker switch can be found under the seat of the E-bike, in the storage compartment. The seat needs to be unlocked using the key. Unlock the seat by inserting the key into the ignition and turning slightly to the left. If the E-bike does not show any power on the LED Digital display screen check to see if the breaker switched off. The breaker switch can be turned off when you want to store the E-bike for a long period of time. Storing it with the breaker switch off keeps the battery from draining but will also shut off the E-bike's alarm.

4.6 BATTERY STORAGE:

<u>IMPORTANT WARNING</u> - STORING YOUR E-BIKE FOR A LONG TIME WITHOUT CHARGING WILL DEPLETE THE BATTERY:

- If you do not charge the E-bike while it is being stored while the alarm is on, it will draw power and drain the battery until it is dead. At that point the E-bike may no longer charge anymore.
- The battery should be stored between 0 and 35 degrees Celsius. To maintain battery lifetime, store at 50% to 100% charge capacity, and recharge the battery every 6-8 weeks.
- Check the main power switch also known as circuit breaker or main breaker and turn it off if storing the E-bike/battery for a long time.
- Batteries can be brought back, by charging each one 12V INDIVIDUALLY at a time with a 12V CHARGER (car battery charger). After you have charged each battery individually you can now use your original Ebike charger as previously before as normal.
- If you want to do a voltage check you must own a multimeter and put it on the voltage setting if the E-bike does not have a factory voltage display as a feature already.

4.7 CLEANING CARE:

Carefully wipe plastic parts with a damp cloth, then let air dry or wipe with a dry cloth. Protect all electrical wires and components inside the E-bike from water. Lubricate all moving parts as indicated in Regular Maintenance Time Table (4.8)



4.8 REGULAR MAINTENANCE TIME TABLE:

| A-check, Adjust, Replace when necessary, L-Lubricate, C-Clean | | | | | | | | | |
|---|---------------------|--------|--------|--------|--------|----------|----------|--|--|
| Items | Travel Mileage (KM) | | | | | | | | |
| | 200km | 1000km | 3000km | 5000km | 8000km | 10,000km | 12,000km | | |
| All bolts & nuts | Α | Α | Α | Α | А | Α | Α | | |
| Tires | Α | Α | Α | А | Α | Α | Α | | |
| Wheel bearing | | Α | С | А | С | С | Α | | |
| Steering Column | Α | | Α | | Α | | Α | | |
| Mirrors | Α | | Α | | Α | | Α | | |
| Lubrication of all position | | L | | L | | L | L | | |
| Motor Bearing | | Α | | С | | | С | | |
| Ft & Bk braking block | | Α | | А | | | Α | | |
| Ft & Bk shock absorber | | Α | | А | | | Α | | |
| Front fork bearing | | Α | | А | | | Α | | |
| Main & side kickstand | | Α | | А | | | Α | | |
| Charger | | Α | | Α | | | Α | | |
| Controller | | | | Α | | | А | | |

| NOTES/DATE: | | | |
|-------------|------|------|--|
| | | | |
| | | | |
| | | | |
| NOTES/DATE: | | | |
| | | | |
| | | | |
| NOTES/DATE: | | | |
| | | | |
| | | | |



5. GENERAL TECHNICAL INFO – TROUBLE SHOOTING:

Q. Why won't my Electronic Vehicle turn on? There is no lights or power when I turn the key switch?

- Check the main power switch also known as circuit breaker or main breaker.
- Make sure the power wires are securely tightened inside the main power breaker switch.
- Make sure all your battery wires are tightly connected and all power connections are not loose or not attached.

Q. My lights work but my Electronic Vehicle will not move?

- Make sure it is charged. If it is not, once voltage reaches a low level the controller will not turn on and as a result the E-bike will not move even if the low voltage can power the lights. For example, a 48v battery will go down to 42v and it is considered empty because the controller turns off to protect the batteries from low voltage. It is also known as an LVC which is an acronym for Low Voltage Cut Off.
- Check the brake handle switch wire (small button behind the brake lever) as it could activate the motor cut off if not fully released.
- Check all connections of the only 3 other parts that would cause this. They are the throttle, controller or motor. It is rare that the motor has any issues because it is the most robust component of the vehicle. However, there are hall sensors inside the motor that could go bad
- on rare occasion. A remedy for this is using a sensor less controller. It may be a better alternative to replacing the hall sensor or motor completely.

**To recap, this issue can be due to a number of reasons, but we will start with the most likely and simple fix.

- 1. The brake switch is stuck on. Check your rear red tail stop light to see if the light is activated by your brakes.
- 2. The kill switch or kickstand switch (if equipped) is stuck on.
- 3. The controller needs to be replaced.
- 4. The throttle wire has a loose connection or needs to be replaced.
- 5. It is not common to be a motor issue because it is typically the most robust electrical component on the vehicle.

Q. What does the lightening bolt symbol on the alarm fob do?

• The lightening bolt button on the alarm fob turns on the power of the E-Bike. This is the auto start button. Press the unlock button to disengage it.



Q. The battery voltage/gauge/meter drops when I ride. Why does it do that?

As you draw power from the battery you will get some voltage drop that will settle once you stop.
 It is recommended that you charge the E-bike as frequently as possible to maintain battery capacity for both speed and range.
 As your voltage is depleted the Electronic Vehicle speed will lower incrementally.

Q. What should my battery voltage reading be when it is full?

- It is recommended for all Electronic Vehicle owners to have a multimeter to read the voltage.
- For 48V E-bikes the voltage range when full is typically around 52V-53V
- For 60V E-bikes the voltage range when full should be around 64V-67V
- For 72V E-bikes the voltage range when full should be around 77V-80V
- Lithium batteries have a similar but slightly different total cell voltage.
- If you want to do a voltage check you must own a multimeter and put it on the voltage setting if the E-bike does not have a factory voltage display as a feature already.

Q. Is there a way to condition the batteries? How do I take care of my batteries?

We suggest that brand new batteries should be charged fully. It's best to keep your batteries
power level stay closer to the fully charged status rather than in a depleted status. Batteries
won't perform as well in really cold temperatures. We recommend charging wherever you go
whether it is at work or wherever you go if possible. Freezing your batteries will damage them.
Over-charging or leaving them in a state of discharge will also harm them. Make sure you use the
right charger that has the right voltage.

Q. What should I set my tire pressure at?

 Typically, rear tires should be kept closer to 35-40psi for less rolling resistance although the front tire bears less weight so it can be set at a bit lower, closer to 30-35psi. Check on the tire to read the PSI setting.

Q. What should I do if I get a flat tire due to puncture?

 You should keep a tire plug kit handy to plug the hole once you find it. Inner tire coating also known as "slime" also works. If you have a tire with an inner tube in it, you need to either repair the tube with a patch kit or better yet, replace it. Most Armada electric vehicles have tubeless tires.